| BANVERKET | | Jernbaneverket | | | | |
|-----------|--|----------------|----------|--|--|--|
| Approved | | | Approved | | | |
| SPEC | SPECIFIC TRANSMISSION MODULE (STM) – EBICAB GENERAL TECHNICAL REQUIREMENTS | | | | | |
| | 100 200 E 004 Version v. 5.1 | | | | | |

GRS

STM General Technical Requirements Specification

TR GRS v5.1 2009-10-28 Sign:____

TR_GRS_v5.1.doc 2009-10-29 Sign:____

Document Modification History

| Version | Modification | Valid from | Prepared | Approved |
|---------|---|------------|------------|-------------|
| 1.4 | For approval by RHK, JBV, BV | 6.6.2002 | F Åhlander | S-H Nilsson |
| 2.0 | Added info regarding radio I/F chapter 2.3 | 20.6.2002 | F Åhlander | S-H Nilsson |
| 2.1 | Clarification G 58, G34 and G35 | 15.4.2003 | J Öhrström | S-H Nilsson |
| 3.0 | Changes according to STM National, new I/F F | | U.Svensson | |
| 4.0 | I/F C deleted, recorder info changed | | U.Svensson | |
| 4.1 | Final corrections | 15.2.2007 | U.Svensson | F. Åhlander |
| 4.2 | "STM Delta-GRS-List ver A" is introduced | | K.Hallberg | |
| 5.0 | Update of national requirements | 26.6.2009 | S Wallin | |
| 5.1 | Updated or new national requirements: G64, G57A, G57B. Improved format of text and headers. | 29.10.2009 | B Bryntse | |

TR_GRS_v5.1.doc 2009-10-29 Sign:____

List of contents

| 7 | <i>//</i> | ITRODUCTION | _ |
|---|----------------|--|----|
| | 1.1 | Applicable standards | |
| | 1.2 | List of definitions | |
| | 1.3 | System definition | 9 |
| 2 | /A | ITERFACES | 12 |
| 2 | | | |
| | 2.1 | Interface A | |
| | 2.2 | Interface B | |
| | 2.2.1 | Transmission system test function | |
| | 2.2.2 | Telepowering control. | |
| | 2.2.3 | Conditions for balise detect | |
| | 2.2.4 2.2.5 | Telegrams | |
| | 2.2.3 2.3 | Switching between antennas | |
| | 2.3 | Interface D | |
| | 2.4 | Interface F | |
| | 2.6 | Interface K | |
| | 2.7 | Balise reading | |
| | 2.1 | Danse reading | 10 |
| 3 | E | NVIRONMENT | 18 |
| | 3.1 | Operational Environmental Requirements | |
| | 3.1.1 | Ambient temperature | |
| | 3.1.2 | Solar radiation | |
| | 3.1.3 | Humidity | |
| | 3.1.4 | Wind and pressure pulses | |
| | 3.1.5 | Altitude | 20 |
| | 3.1.6 | Water and precipitation | 20 |
| | 3.1.7 | Pollutants and contaminants | |
| | 3.1.7.1 | Mechanical | |
| | 3.1.7.2 | | |
| | 3.1.7.3 | Shock | |
| | 3.1.7.4 | | |
| | 3.1.8 | Electromagnetic compatibility | |
| | 3.2 | Environmental Requirements for Storage | |
| | 3.2.1 | Ambient temperature | |
| | 3.3 | CE certificate | 26 |
| 4 | С | OMPATIBILITY | 28 |
| _ | | | |
| 5 | IVI | ODULARITY | 2 |
| 6 | R | ECORDER/DIAGNOSTIC TOOL | |
| | 6.1 | Recorder | |
| | 6.2 | Diagnostic tool | |
| | 6.2.1 | General | |
| | 6.2.2 | List of functions and data | |
| | 6.3 | Recording to the JRU | 32 |
| 7 | n <i>n</i> | ECHANICAL CONSTRAINTS | 9. |
| • | | | |
| | 7.1 7.2 | Logic unitSTM Antenna | |
| | 1.4 | 17 1 17 1 / 11 IVIIII da | 74 |

TR_GRS_v5.1.doc

2009-10-29

Sign:____

| 8 | PERFORMANCE | 34 | 4 |
|---|---------------------------------------|----|---|
| _ | · · · · · · · · · · · · · · · · · · · | | - |

Tables

| TABLE I TEMPERATURES | 18 |
|--|----|
| TABLE 2 SOLAR RADIATION | 19 |
| TABLE 3 HUMIDITY - TRAINBORNE EQUIPMENT | 19 |
| TABLE 4 WATER AND PRECIPITATION | 21 |
| TABLE 5 DEBRIS LAYERS ON TOP OF THE BALISE | 22 |
| TABLE 6 DEBRIS UNDER THE ANTENNA UNIT (FOR BALISE) | 23 |
| TABLE 7 MECHANICAL VIBRATIONS FOR TRAINBORNE EQUIPMENT | 24 |
| TABLE 8 MECHANICAL SHOCKS FOR TRAINBORNE EQUIPMENT | 25 |
| Table 9 Temperatures | 26 |
| TABLE 12. RECORDING TO THE JRU | 33 |

TR_GRS_v5.1.doc 2009-10-29 Sign:____

1 INTRODUCTION

This document specifies the general technical requirements for the Specific Transmission Module, STM. A majority of the listed requirements will form the basis for the development of a generic product (GP) that will be used for STM applications in Norway, Sweden and Finland i.e EBICAB700 and EBICAB900.

EBICAB700 is the common definition used for the ATP system in Norway and Sweden, ATC-2. This definition is used in the TSI for Control/Command (EG directive 96/48) and covers balises and other ATC-2 products from both existing suppliers.

EBICAB900 is the definition used for the ATP system in Finland, ATP-VR. This definition will be used in the TSI for Control/Command (EG directive 2001/16) and covers balises and other ATP-VR products from both existing suppliers.

In this document, mandatory national requirements are designated *Gnn*, while additional requirements are designated *Ann*.

1.1 Applicable standards

G1 The STM and development of the STM shall comply with the standards listed below. If the standards are not consistent with the Basis for Tender, the Basis for Tender overrides the standard.

| IRVEXIAI | Miljöbaskrav vid upphandling av tjänster och varor (Basic environmental requirements at tenders of services and products) |
|----------|---|
| | |

| UNISIG ERTMS ETCS | System Requirement Specification for ERTMS/ETCS, |
|----------------------|--|
| Class1 specification | EURORADIO and STM |
| | |

| EN 50121 | Railway applications – Electromagnetic compatibility, 2000-12-01 |
|----------|--|
| EN 50125 | Railway applications – Environmental conditions for equipment, 1999-10-29 |
| EN 50155 | Railway applications – Electronic equipment used on rolling stock, 2001-11-30 |
| EN 50238 | Railway Applications – Compatibility between rolling stock and train detection systems, 2003 |

| TR GRS v5.1.doc | 2009-10-29 | Sian: |
|-----------------|------------|--------|
| 1K GK5 V3.1.00C | 2009-10-29 | oluli. |

| NUP-T2 | Community of Nordic Railways (CNR), Specification for Electronic Equipment used on Rolling Stock, edition 09.09.1996 |
|--------|--|
|--------|--|

| SS-EN 50126 | Railway applications – Specification and demonstration of Reliability, Availability, Maintainability and Safety (RAMS) |
|-------------|---|
| SS-EN 50128 | Railway applications – Communications, signalling and processing systems – Software for railway control and protection systems. |
| SS-EN 50129 | Railway applications – Safety related electronic systems for signalling. |

TR_GRS_v5.1.doc 2009-10-29 Sign:____

1.2 List of definitions

| Expression | Explanation |
|-----------------|---|
| Antenna | The vehicle antenna, which is used for reading passed balises. Mounted on the underside of the engine. |
| | Automatic Train Control, automatic speed supervision. Two main parts: |
| ATC | ☐ The onboard equipment, with both ETCS and STM units. |
| | ☐ The track equipped mainly by ATC-2/ATP-VR balises, but Eurobalises can also be used. |
| ATC equipment | A common name of the track and train equipment that is included in the ATC system. |
| Balise | A transponder that is placed between the rails. When requested, it transmits information to passing trains. |
| ERTMS | European Rail Traffic Management System. |
| ETCS | European Train Control System. |
| EVC | European Vital Computer. |
| FRS | Functional Requirements Specification |
| H(8, 4) | Hamming code 8, 4. |
| H(16, 11) | Hamming code 16, 11. |
| I/F | Interface. |
| M(8, 4) | Modified Hamming code 8, 4. |
| M(16, 11) | Modified Hamming code 16, 11. |
| STM | Specific Transmission Module. |
| STM SRS | STM System Requirements Specification. |
| Synchronisation | Method to identify the beginning and end of message in a serial data flow. |
| Telegram | A message, received by the onboard equipment. The telegram is surrounded by synchronisation words (EBICAB700) or features an embedded synchronization sequence (EBICAB900). |

TR_GRS_v5.1.doc 2009-10-29 Sign:____

1.3 System definition

The Specific Transmission Module, STM, is an on-board constituent fully defined by its functionality, interfaces and performance. The basic functionality of the STM is specified as a list of requirements in the Functional Requirements Specification (FRS). All other technical requirements, including specifications of interfaces and performance requirements are listed in this document.

The following figure defines the STM system borders:

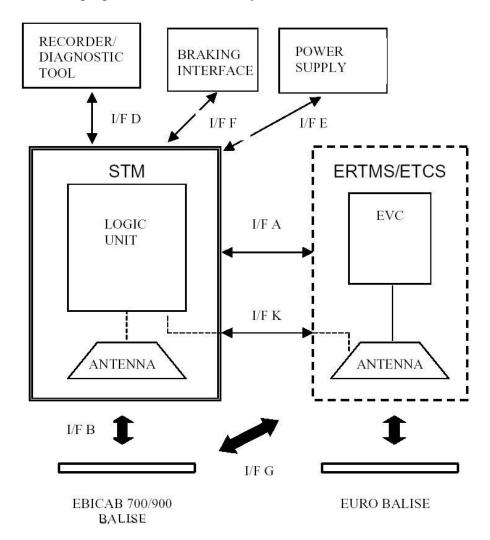


Figure 1: STM System borders and interfaces

The STM includes two internal parts defined as Logic unit and Antenna.

TR_GRS_v5.1.doc 2009-10-29 Sign:____

The STM includes the following interfaces:

- Interface A FFFIS I/F between the STM and ERTMS/ETCS kernel and/or DMI
- Interface B FFFIS I/F between the STM and EBICAB 700/900 Balises
- Interface D FFFIS I/F between the STM and a recorder or a diagnostic tool
- Interface E FFFIS I/F between the STM and the power supply
- Interface F- FFFIS I/F between the STM and the braking system
- Interface K FFFIS I/F between the STM and a combined ATC/ETCS Antenna

TR_GRS_v5.1.doc 2009-10-29 Sign:____

(blank)

TR_GRS_v5.1.doc 2009-10-29 Sign:____

2 INTERFACES

2.1 Interface A

Interface A is defined as the basic communication interface between the STM and the ERTMS/ETCS kernel and/or DMI. Depending on the physical arrangement of the STM, requirement G2A *or* G2B shall be fulfilled.

- The STM shall include an Interface A based on the following subsets of the UNISIG ERTMS/ETCS Class 1 specification.
 - SUBSET-026-v2.2.2 (ERTMS/ETCS SRS)
 - SUBSET-035-v2.1.1 (STM FFFIS)
 - SUBSET-056-v2.2.0 (Safe time layer)
 - SUBSET-057-v2.2.0 (Safe link layer)
 - SUBSET-058-v2.1.1 (Application layer)
 - SUBSET-059-v2.1.1 (STM Performance requirements)
- **A2** Alternative: For an internal STM (the STM is integrated in the ETCS hardware) the communication hardware may be omitted and the protocol may be adapted to the actual system structure.

The functionality as seen from a user standpoint must still fulfill the following subsets:

- SUBSET-026-v2.2.2 (ERTMS/ETCS SRS)
- SUBSET-035-v2.1.1 (STM FFFIS), except for chapter 14 (Profibus)
- SUBSET-059-v2.1.1 (STM Performance requirements)

2.2 Interface B

Interface B is defined as the airgap interface between the STM and EBICAB 700/900 balises.

TR_GRS_v5.1.doc 2009-10-29 Sign:____

The airgap specification for interface G (UNISIG SUBSET 100 - Interface 'G' Specification, issue 1.0.1) can be applied also to interface B.

A3 The STM shall include an interface B according to subset 100, alternative see below. The interface shall be designed for full compatibility with all existing balise types in the track systems of JBV/BV.

Alternative: A transmission system that is approved for usage with ATC-2 can be accepted even if its specification should deviate from Subset 100.

2.2.1 Transmission system test function

The purpose of the test function is to ensure that the transmission system is able to detect balises. In case of transmission system deficiencies, the system shall immediately revert to a safe behaviour, either braking or giving an alarm. This is described in the FRS.

2.2.2 Telepowering control

- A4 The 27 MHz transmitter of the transmission system shall be turned off (while the train is stationary and when the onboard system is switched off).
- A5 The transmitter shall be activated when the onboard system is activated, and at least one of the following conditions apply:

| | The direction controller is in Forward or Reverse, or the controller has been in any of these positions during the last 10 seconds. |
|----|---|
| 2. | The vehicle is moving, or has been moving during the last 10 seconds |
| 3. | The antenna is standing over a balise |

2.2.3 Conditions for balise detect

The basis for safe operation of any ATC system is the safe detection of all balises. The detection scheme (24-bit Swedish/Norwegian) is described in the FRS.

2.2.4 Telegrams

Telegram content and synchronisation is described in the FRS.

| TR_GRS_v5.1.doc | 2009-10-29 | Sign: |
|-----------------|------------|-------|
| | | |

2.2.5 Switching between antennas

The maximum allowed distance between the antenna in use and the first axle shall be 6.4 meters, otherwise problems can occur with signals going to a stop aspect before the balises have been read. If this distance cannot be kept with a single antenna, the transmission system must be switched between two antennas, placed within the allowed limit.

In vehicles with two antennas, the transmission system shall select antenna according to which cab is active. The forward antenna shall always be used.

2.3 Interface D

Interface D is defined as the interface between the STM and a recorder or a diagnostic tool.

- A6 The STM shall include an interface D. The interface shall be designed according to the following requirement:
 - The physical and electrical interface shall make it possible to connect the STM to a COM port or a USB port of a standard PC.

This requirement does not by itself imply that a recorder function is mandatory.

2.4 Interface E

Interface E is defined as the interface between the STM and the power supply. For an internal STM (integrated in the ETCS hardware), interface E is not applicable.

G7 An external STM shall include an interface E.

The interface E shall fulfill the following requirements:

The STM equipment shall be powered from the battery of the vehicle.

| TR_GRS_v5.1.doc | 2009-10-29 | Sign: |
|-----------------|------------|-------|
| | | |

G9 The STM shall be fully operable at any of the following battery voltages on the vehicle.

| Nominal | Variation |
|---------|-----------------------|
| 24V | According to EN 50155 |
| 48V | Interruption class |
| 60V | S2 (10 ms) |
| 72V | |
| 110V | |

The equipment shall function adequately with a non-earthed DC supply and with an earth fault which could possibly occur on either side of the two battery poles.

2.5 Interface F

Interface F is defined as the interface between the STM and the braking system.

The STM shall have access to a feedback from the braking system. This is necessary to fulfill the braking curve requirements stated in the FRS. The feedback may be physically included in interface F, but as an alternative the STM may use other sources for pressure feedback, as long as it provides the same function.

G63 Reserve

- **G64.50a** A safe direct emergency brake connection shall be implemented on-board in the following case:
 - a) The response time from the combined systems STM and ETCS > 0.5 s, where
 - The response time is counted from the event (received balise or other information) that is required to activate the emergency brake, until the emergency brake relay contact is opened.
 - b) Reserve.

Note: This means that the STM has to be able to give an emergency brake order either through both interfaces A and F, or only through interface A, depending on whether interface F is implemented or not.

| TR_GRS_v5.1.doc | 2009-10-29 | Sign: |
|-----------------|------------|-------|
| | | |

A65 It shall be possible to choose by the time of installation whether the safe connection to the emergency brake shall be implemented or not.

2.6 Interface K

Interface K is defined as the interface between the STM and the ERTMS/ETCS transmission system. Interface K is mandatory for the use of a combined ATC/ETCS antenna.

A11 The STM shall include an interface K according to subset 101. For an internal STM, other interfaces can be accepted.

Note: Even if interface K is not a national requirement, it is strongly recommended that it is included in all external STM:s.

2.7 Balise reading

- The STM shall provide a means for reading ATC-2 balises, either via interface B or interface K.
- G13 Reserved.
- G14 Reserved...

TR_GRS_v5.1.doc 2009-10-29 Sign:____

(blank)

TR_GRS_v5.1.doc 2009-10-29 Sign:____

3 ENVIRONMENT

This section specifies the environmental requirements on the STM equipment. Requirements are specified below for:

- ambient temperature
- solar radiation
- humidity
- wind and pressure pulses
- altitude
- water and precipitation
- pollutants and contaminants
- mechanical
- electromagnetic compatibility

3.1 Operational Environmental Requirements

- The equipment shall have full functionality within the requirements specified below. Full functionality of STM means that no malfunction may arise as a cause of any combination of environmental conditions within the specified requirements.
- G16 If STM is exposed to environmental conditions outside specified requirements, malfunctions that may occur shall not affect the overall safety of the STM.

3.1.1 Ambient temperature

Temperature requirements that shall be fulfilled by the STM are specified in the table 1.

| INSTALLATION LOCATION | Ambient temperature |
|--------------------------|---------------------|
| Train (Outdoor) | -40 to +70 |
| Train (Indoor) | -25 to +70 |

Table 1 Temperatures

TR_GRS_v5.1.doc 2009-10-29 Sign:____

3.1.2 Solar radiation

Requirements for exposure of solar radiation that shall be fulfilled by the STM are specified in the table 2.

| INSTALLATION LOCATION | Solar radiation |
|--------------------------|-----------------------|
| Train (Outdoor) | 1120 W/m^2 |
| Train (Indoor) | |
| Engine Room | 700 W/m ² |
| Equipment Room | 700 W/m^2 |
| Drivers Cab | 1120 W/m ² |
| Coach | 700 W/m^2 |

Table 2 Solar radiation

3.1.3 Humidity

Requirements for external humidity levels that shall be fulfilled by the STM are specified in the table 3.

| Duration | Limit Value |
|--------------------------------------|---|
| Yearly average | 10-75% Relative Humidity |
| On 30 days in the year, continuously | 10-95% Relative Humidity |
| On the other days, occasionally | 30g/m ³ occurring in tunnels |

Table 3 Humidity - Trainborne equipment

3.1.4 Wind and pressure pulses

Requirements for wind and pressure pulses are specified in this chapter.

G20 Exposure of permanent crosswinds of 35m/s and exceptional gusts of 50 m/s and duration of 1 second per gust shall not affect the equipment that are placed on the outside of the

TR_GRS_v5.1.doc 2009-10-29 Sign:____

vehicle. For gusts longer than 1 second the equipment performance may be affected but without permanent damage.

Exposure of pressure pulses caused by trains passing in tunnels shall not affect the equipment. Particular local air pressure conditions may exist due to the effects of trains running through a tunnel. However, as a minimum, all equipment shall function correctly when subjected to the following severity of pressure pulse:

$$\Delta P = \pm 5 \text{ kPa}$$

The associated rate of change of pressure is:

$$\Delta P/\Delta t = 1 \text{ kPa/s}$$

3.1.5 Altitude

Altitude requirements are specified in this chapter.

The equipment shall not be affected at altitudes between -120m (below sea level) and 2000m (above sea level), which corresponds to an air pressure range of approximately 101.3 kPa to 79.5 kPa.

3.1.6 Water and precipitation

Water and precipitation requirements are specified in this chapter.

- G23 The equipment shall not be affected when subjected to all forms of precipitation. In this respect, considerations shall be given to (but not limited to) the following:
 - The effects of snow, ice and hail penetrating equipment housings.
 - De-icing with high temperature steam, water or pressure air.
 - The effects of snow melting and freezing again.
 - Hailstones of a maximum diameter of 15mm.
 - Light dew

| TR_GRS_v5.1.doc | 2009-10-29 | Sign: |
|-----------------|------------|-------|
| | | |

The equipment shall not be affected when subjected to the severities of water and precipitation specified in Table 4.

| INSTALLATION LOCATION | Precipitation (mm/min) | Water from sources other than rain (m/s) |
|--------------------------|------------------------|---|
| Train (Outdoor) | 15 | 3 |
| Train (Indoor) | | |
| Engine Room | N/A | 0.3 |
| Equipment Room | N/A | 0.3 |
| Drivers Cab | N/A | N/A |

Table 4 Water and precipitation*

3.1.7 Pollutants and contaminants

Pollutants and contaminants requirements are specified in this chapter.

- G25 The equipment shall not be affected when being exposed to following chemical pollution in the environment:
 - Sulphur dioxide: 0.3 mg/m³
 - Hydrogen sulphide: 0.1 mg/m³
 - Chlorine: 0.01 mg/m³
 - Nitrogen dioxidxe: 0.1 mg/m³
 - Ozone: 0.05 mg/m³

 $\ensuremath{\text{N/A}}$ denotes that the classification is not applicable for this installation location.

TR_GRS_v5.1.doc 2009-10-29 Sign:____

^{*} NOTES

The equipment shall not be affected with the debris layers on the balise and under the antenna unit specified by the table 5 and 6

| Material | Description | Layer [mm] |
|------------------------|--------------------------------------|------------|
| Water | Clear | 100 |
| | 0.1 % NaCl (weight) | 100 |
| Snow | Fresh, 0°C | 300* |
| | Wet, 20 % water | 300* |
| Ice | Non porous | 100 |
| Ballast | Stone | 100 |
| Sand | Dry | 20 |
| | Wet | 20 |
| Mud | Without salt water | 50 |
| | With salt water, 0.5 % NaCl (weight) | 10 |
| Iron Ore | Taconite | 20 |
| | Magnetite | 10 |
| Iron dust [†] | Braking dust | 10 |
| Coal dust | 8 % sulphur | 10 |
| Oil and Grease | | 50 |

Table 5 Debris layers on top of the Balise

TR_GRS_v5.1.doc 2009-10-29 Sign:____

 $^{^{\}ast}$ 300 mm or up to the bottom of the Antenna unit.

 $^{^{\}scriptscriptstyle \dagger}$ A non-conductive mixture of grease and iron oxide which is normally encountered in Railway environment.

| Material | Description | Layer [mm] | |
|----------------|---|------------|---------------|
| | | Minimum | Maximum |
| Snow | Fresh, 0°C | 20 | top of Balise |
| | Wet, 20 % water | 10 | top of Balise |
| Ice | | 10 | top of Balise |
| Mud | Without salt water | 10 | 50 |
| | With salt water, 0.5 % NaCl (weight) | - | 50 |
| Iron Ore | Taconite | - | 5 |
| | Magnetite | - | 5 |
| Iron dust | Braking dust | 2 | 5 |
| Coal dust | 8 % sulphur | - | 5 |
| Oil and Grease | | 2 | 20 |

Table 6 Debris under the Antenna unit (for Balise)

G27 The manufacturer shall state the performance of the Antenna unit and the maximum allowed debris layers for this antenna.

3.1.7.1 Mechanical

Mechanical stress requirements are specified in this chapter.

- G28 Track ballast can cause serious damage to outdoor equipment attached to the train. The design shall take into account the effect of ballast and stones up to a diameter of 15mm.
- G29 Trainborne equipment and its mountings shall be capable of withstanding without deterioration or malfunction all mechanical stresses that occur in service.

3.1.7.2 Vibrations

G30 The equipment and its mountings shall be designed to withstand the continuous sinusoidal vibration stresses, in all the three major axis as specified in table 7.

| TR_GRS_v5.1.doc | 2009-10-29 | Sign: |
|-----------------|------------|-------|
| | | |

| Installation location | Mass of equip- ment [kg] | Frequency range [Hz] | Cross- over frequen- cy [Hz] | Displacemen t amplitude below crossover frequency [mm] | Acceleration amplitude above crossover frequency [m/s ²] |
|---|--------------------------------|----------------------|---------------------------------------|---|---|
| Underframe/ | > 2000 | 1 - 35 | 8.2 | 0.75 | 2 |
| body/roof - Directly | < 2000 | 5 - 100 | 7.1 | 1.5 | 3 |
| mounted equipment | | | | | |
| Underframe/ body/roof - Equipment in frames and boxes | > 30 | | 8.2 | 1.5 | 4 |
| | 3 - 30 | 5 - 150 | 8.4 | 2.5 | 7 |
| | 0.3 - 3 | | 8.7 | 5 | 15 |
| | < 0.3 | | 22.5 | 1.5 | 30 |
| Bogie | No limit | 5 - 100 [*] | 8.3* | 7.5* | 20* |
| On the wheel set | No limit | 5 - 100 | 20.5 | 12 | 200 |

Table 7 Mechanical vibrations for trainborne equipment

3.1.7.3 Shock

The equipment and mountings shall be designed to withstand the shock stresses specified in table 8.

| Installation location | Peak value of amplitude / half sine duration [†] | | | |
|---|---|-------------|--------------|--|
| | Vertical | Transverse | Longitudinal | |
| Underframe/body/roof – Directly mounted equipment | 3g / 30 ms | 3g / 30 ms | 3g / 100 ms | |
| Underframe/body/roof – Equipment in frames and boxes | 3g / 30 ms | 3g / 30 ms | 5g / 30 ms | |
| Bogie | 30g / 18 ms | 30g / 18 ms | 30g / 18 ms | |
| Wheel set | 100g / 6 ms | 100g / 6 ms | 100g / 6 ms | |

 $^{^{\}star}$ For frequencies above 22 Hz use the following values:

TR_GRS_v5.1.doc 2009-10-29 Sign:____

^{22 - 32} Hz displacement amplitude 1 mm

^{32 - 100} Hz acceleration amplitude 40 $\mbox{m/s}^2$

 $^{^{\}scriptscriptstyle \dagger}$ Half sine form in accordance with IEC 68.2.27 Test Ea

Table 8 Mechanical shocks for trainborne equipment

3.1.7.4 Other acceleration forces

- G32 Trainborne equipment and mountings shall also be capable of functioning when subjected to tilting and centrifugal acceleration forces. The equivalent maximum values of transverse acceleration applied to the body of the vehicle shall be taken as 4 m/s² (less than 50 ms duration) or 2 m/s² when the duration exceeds 50 ms.
- G33 During traction and braking operations, trainborne equipment shall be capable of functioning when subjected to longitudinal acceleration forces of 7 m/s² with a duration higher than 50 ms.

3.1.8 Electromagnetic compatibility

Electromagnetic compatibility requirements are specified in this chapter.

Operational requirements for trainborne requirements are specified in the CENELEC standard EN 50121. Railway applications - Electromagnetic compatibility: Rolling stock - Apparatus.

- With regard to immunity from electromagnetic disturbance of components, the limiting specified in EN 50121-3-2 shall apply.
- The defined limits for electromagnetic compatibility are valid for all equipment, installations, sub-systems and systems. Furthermore, it shall be ensured that the equipment functions correctly when disturbance currents are caused by traction units, either in normal operation or in the event of a failure. Immunity for electromagnet disturbance shall be according to what is specified by EN 50 121.

3.2 Environmental Requirements for Storage

- The environment that the STM equipment is stored within shall fulfil storage requirements specified below.
- Full functionality is not required during storage, but the equipment shall not be damaged temporarily or permanently if the specified conditions below are kept within.
- G38 If STM is exposed to environmental conditions outside specified requirements malfunctions that may occur shall not affect the overall safety of the STM.

TR GRS v5.1.doc 2009-10-29 Sign:

3.2.1 Ambient temperature

G39 Temperature requirements that shall be fulfilled by the STM are specified in the table 9.

| LOCATION | Ambient temperature |
|----------|---------------------|
| Outdoor | -40 to +85 |
| Indoor | -40 to +85 |

Table 9 Temperatures

G40 For all other environmental requirements the specified operational environmental requirements listed in the above chapters shall apply.

3.3 CE certificate

The STM and the antenna shall be CE marked.

TR_GRS_v5.1.doc 2009-10-29 Sign:____

(blank)

TR_GRS_v5.1.doc 2009-10-29 Sign:____

4 COMPATIBILITY

- The STM shall be fully compatible with all currently existing ATC trackside equipment in Norway and Sweden. This includes all approved balise types and any combination of balises from existing suppliers, e.g. parallel EBICAB700, serial EBICAB700 and Ansaldo mini-balise.
- G43 Compatibility shall be verified by testing, for all existing balise types within the trackside network of JBV and BV. Verification shall be made against a sufficient number of balises of each type.

5 MODULARITY

- G44 Reserve
- A45 It shall be possible to install the STM (the logic unit) without the antenna. Information from the balises shall then be available through interface K utilising a combined ATC/ETCS antenna.
- The installation of STM without a dedicated separate STM antenna shall comply with all technical requirements in the Basis for Tender i.e. this type of installation shall have no influence on functionality, performance, safety etc. compared to an installation with a special STM antenna.
- The STM shall have at least 20% of spare capacity regarding memory size and CPU power in order to make future updates and/or upgrades feasible.

TR GRS v5.1.doc 2009-10-29 Sign:

(blank)

TR_GRS_v5.1.doc 2009-10-29 Sign:____

6 RECORDER/DIAGNOSTIC TOOL

- A48 It shall be possible to connect, temporarily or permanently, a Recorder and/or a Diagnostic tool to the STM.
- A49 The Recorder analysing tool and the Diagnostic tool shall consist of software applications running on a standard PC with a Windows based operating system, including Windows NT and Windows XP.

6.1 Recorder

The recorder function is divided into two parts namely recording of essential STM data in real-time and analysis of recorded data. The recording of data can be done internally in the STM or externally using a specially designed recorder unit. The recorded data will then afterwards be analysed using a Recorder analysing tool.

- A50 The recorder shall be used for recording events concerning the STM and its functionality.
- A51 Recorded data shall be saved for at least 48 hours or more.
- A11 input data to the STM and all output data from the STM, including balise information marked with time and position, shall be recorded by the STM recorder.
- A53 It shall be possible to select, analyse, display and print out the recorder information, in on-line (real time) or off-line mode, supported by an external PC with a software application. The recorded data may either be stored as "raw data" or as completely formatted data, ready for output to a screen or a printer.

TR GRS v5.1.doc 2009-10-29 Sign:

A54 The following internal information shall be recorded, as a minimum, at the occasions specified:

| Information | Recorded: |
|---|---|
| STM identity and program version(s) | At start of mission |
| STM and recorder status | At every change / error |
| Internal time (in the recorder unit, $\leq 0.5 \ s$ resolution) | At every time any other information is recorded |
| Internal lamps used by the STM | At every change |
| Entered vehicle specific STM train data | When entered |
| STM condition | STM state + area |
| Service program indications (optional) | At every change |

A55 Unchanged data shall be stored at regular intervals, even if no change has occurred. This is to enable readout of data from the beginning of memory, even if the originally stored data (e.g. program identity from start-up, or train data) has been overwritten. This repetition shall occur at least every 15 minutes.

6.2 Diagnostic tool

6.2.1 General

A56 Externally controlled service functions shall be performed during normal STM operation in co-operation with a special Diagnostic tool that can be connected to the STM. The results shall be shown on the screen of the tool (except for tests performed by the STM, as possible braking or display tests).

TR_GRS_v5.1.doc 2009-10-29 Sign:____

6.2.2 List of functions and data

A57 The following data or commands, where as a minimum the mandatory, shall be output by the STM to the Diagnostic tool. The data shall be updated at least once per second.

| Manda- tory | Service display or function | Comment |
|----------------|-----------------------------|---|
| X | Train speed | (km/h) |
| X | Passed balise groups | At least the two latest |
| X | System data | STM identity and program version |
| | Train data | Train data, National values |
| | Odometer | Nom/min/max (m) |
| | ETCS/STM condition | ETCS mode, STM state, STM area |
| | Error information | Error messages |
| | Memory contents | Display contents of memory location or I/O port according to selected address |
| | Optional functions | Determined by supplier |

6.3 Recording to the JRU

The purpose of this recording is to facilitate investigations of hazardous railway events.

G57A.50n Recording shall be performed to the juridical recording unit of the ETCS, the JRU.

TR_GRS_v5.1.doc 2009-10-29 Sign:____

G57B.50n The following STM related information shall be recorded as a minimum, at the occasions specified:

| | RECORDED STM DATA | OCCASION 1) 2) 3) |
|----|------------------------------|--|
| a) | STM packets in general | Sent or Received ^{4) 5) 6)} |
| b) | Brake pressure | Pressure change ≥ 10 kPa |
| c) | STM odometer information | Speed change > 2 km/h Position change > 100 m |
| d) | Balise information | Received |
| e) | Balise error code F1, F2, F3 | Balise error |
| f) | STM state | Every change |
| g) | Shunting state | Every change |
| h) | STM area | Every change |
| i) | Travel direction (F/R) | Every change |
| j) | Max speed | Every change |
| k) | STM emergency brake status | Every change |
| 1) | STM system failure | Every change |
| m) | STM configuration [Table CP] | Start of mission |
| n) | STM identity & SW version | Start of mission |

Table 10. Recording to the JRU

Table explanations

- 1) General rule: recorded data shall be marked with time and position.
- 2) General exception: not needed to be recorded, if already recorded by the ETCS.
- 3) General exception for rows b)-n): not needed to be recorded, if recorded at the same occasions according to row a).
- 4) Exceptions permitted according to the table rows b)-n), if applicable.
- 5) Filtering is allowed at large amounts of data (omit repetitions and small changes).
- 6) For the PERMITTED SPEED BAR: Changes > 2 km/h.

| TR_GRS_v5.1.doc | 2009-10-29 | Sign: |
|-----------------|------------|-------|
| | | |

7 MECHANICAL CONSTRAINTS

The STM is divided into two basic parts, Logic unit and Antenna. The following specifies the mechanical constraints of the two parts separately.

7.1 Logic unit

- G58 The STM Logic Unit (LU) shall fulfil the following mechanical requirements:
 - If the LU is to be mounted in a 19 inch rack system it shall not need more vertical space than 890 mm (20 HE) and a maximum of 600 mm in depth.
 - If the LU is designed differently the total volume shall not exceed 0.25 m³.
 - The total weight of the LU shall not exceed 30 kg.

7.2 STM Antenna

- G59 The STM Antenna (if a separate STM antenna is used) shall fulfil the following mechanical requirements:
 - The size of the STM Antenna shall not exceed the size of existing antennas for EBICAB700/900 systems. This means in practice a maximum size of 700*700*300 mm (L*W*H)
 - The total weight of the Antenna shall not exceed 30 kg.
 - The Antenna shall have a standardised mechanical attachment to the vehicle so that adaptation to different types of vehicles is easily made.

8 PERFORMANCE

- The STM shall be able to discriminate between adjacent balise groups and to promptly detect, read and act on balise information if the balises are placed as described in STM FRS v.4.0, chapter 3, section F2.5.1 and for a maximum train speed of 300 km/h.
- The STM shall be fully functional for all train speeds within the range of 0-300 km/h

TR_GRS_v5.1.doc 2009-10-29 Sign:____